



**Electrolux**


# Instruction Book

UltimateTaste300

Air Fryer

E3AF1-100B

E3AF1-200B

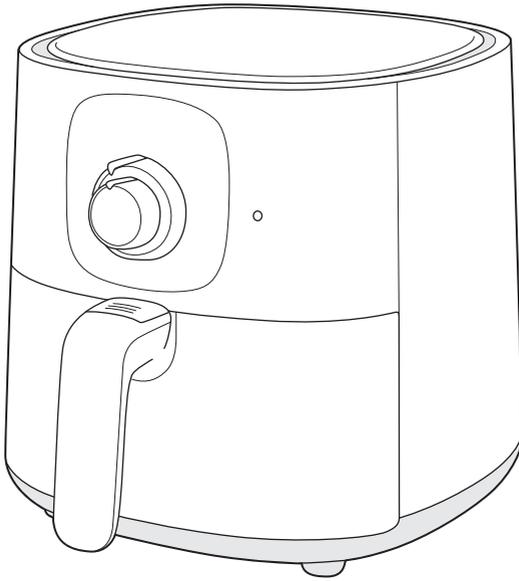

**EN** Instruction Book

**AR** دليل الاستخدام

## WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website to:



Get usage advice, brochures, trouble shooter, service information: [www.electrolux.com](http://www.electrolux.com)



Register your product for better service: [www.electrolux.com/productregistration](http://www.electrolux.com/productregistration)



Buy accessories and consumables for your appliance: [www.electrolux.com/shop](http://www.electrolux.com/shop)

## CUSTOMER CARE AND SERVICE

When contacting the service center, ensure that you have following data available. Model number, PNC, and serial number can be found on the rating plate.

Reference:



### MENCA

Service for all markets except UAE: [serviceMEA@electrolux.com](mailto:serviceMEA@electrolux.com)  
Product registration: <https://register.electroluxarabia.com>


### UAE:

Service for UAE: [customercareae@electrolux.com](mailto:customercareae@electrolux.com)  
Toll free: 800 3535  
Product registration: <https://register.electroluxarabia.com>

## Safety Advice


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or have received instruction concerning how to safely use the appliance and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be performed by children without supervision.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved by a person responsible for their safety. Children should be supervised to ensure that they don't not play with the appliance.
- Please keep the air fryer and the power cord out of the reach of children less than 8 years.
- This appliance is intended for normal household use only.
- If the power cord is damaged or broken, it must be replaced by a service agent or similarly qualified persons to avoid safety hazards.
- The accessible surfaces may become hot during use.
- Do not cover the air inlet and the air outlet openings while the appliance is operating.
- Always return the appliance to an authorized service center for examination or repair.
- Do not attempt to repair the appliance by yourself.
- Do not place the appliance on or near a hot gas stove, any kind of electric stove, electric cooking plates or in a heated oven.
- Always make sure that the plug is inserted into the socket properly.
- Keep the mains cord away from hot surfaces or sharp objects to avoid damage.
- Never put anything flammable, explosive or corrosive in the basket.
- Do not excessively pinch, bend, twist or place heavy objects on the power cord to prevent from exposing or breaking its core.
- Do not use the appliance if the plug, the main cord or the appliance itself is damaged.
- Never start cooking without the basket being in place.
- Do not fill up the basket above the "MAX" line in order to prevent food contact with the heating element
- Do not touch the basket directly with your hands during or right after use to avoid getting scalded.
- Do not use any plastic utensils or normal paper wrapping materials to wrap food for cooking.
- Do not insert pins, wires or other objects into any of the openings of the air fryer to avoid an electrical shock or injury.
- Please be sure to unplug the air fryer before cleaning or repairing it.
- Do not move or shake the air fryer during use.
- Do not insert any foreign objects into the safety switch to avoid any danger.
- **CAUTION: Hot surfaces.** 
- This appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

# General Overview

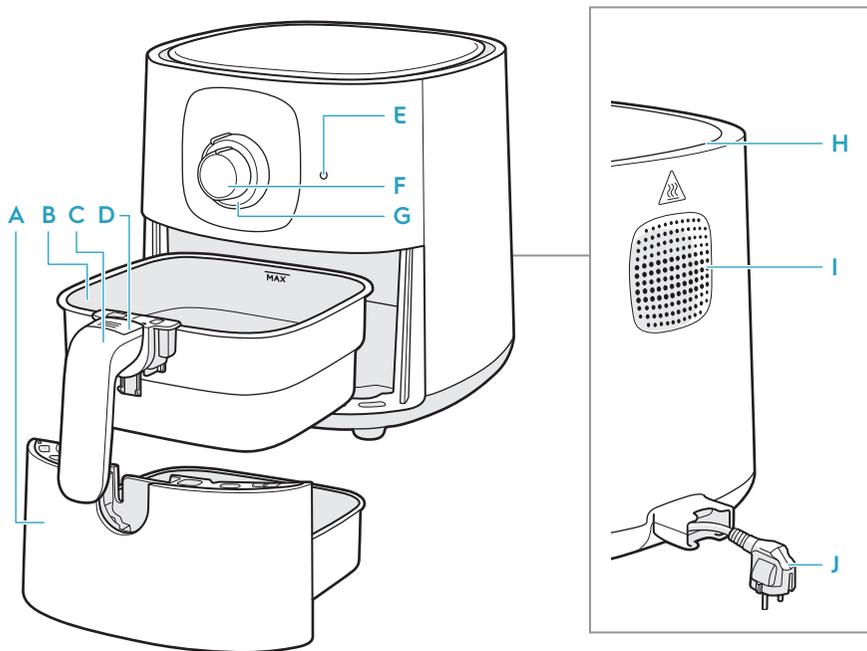


- |                                |                                              |                     |
|--------------------------------|----------------------------------------------|---------------------|
| <b>A</b> Pan                   | <b>E</b> Light                               | <b>H</b> Air inlet  |
| <b>B</b> Basket                | <b>F</b> Timer (0-60min.)                    | <b>I</b> Air outlet |
| <b>C</b> Basket handle         | <b>G</b> Temperature control knob (80-200°C) | <b>J</b> Main cord  |
| <b>D</b> Basket release button |                                              |                     |

# Before first use

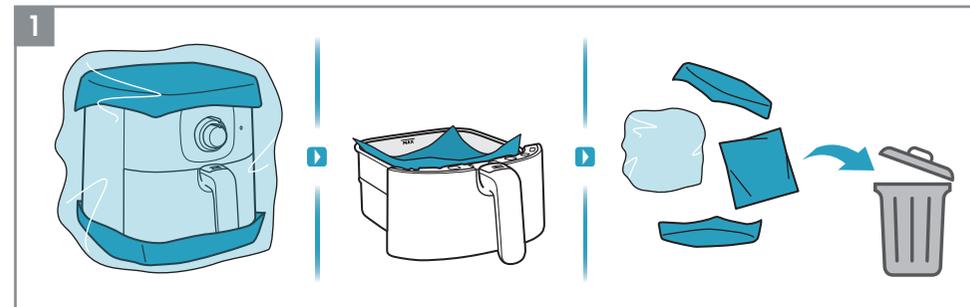


1. Remove all the packaging and protective material.

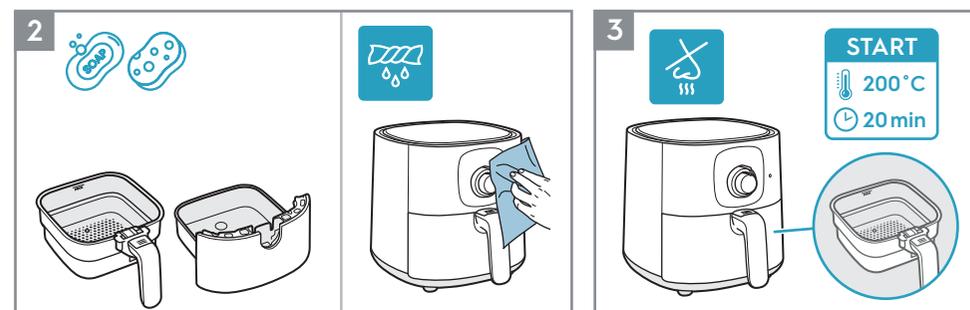


2. Clean the basket and pan with warm water and dish soap. Wipe inside and outside of the appliance with a soft cloth.
3. It is normal for a new unit to emit odors the first few times it is operated. Run the empty air fryer at 200°C for 20 minutes before first use to avoid that.


## How to use

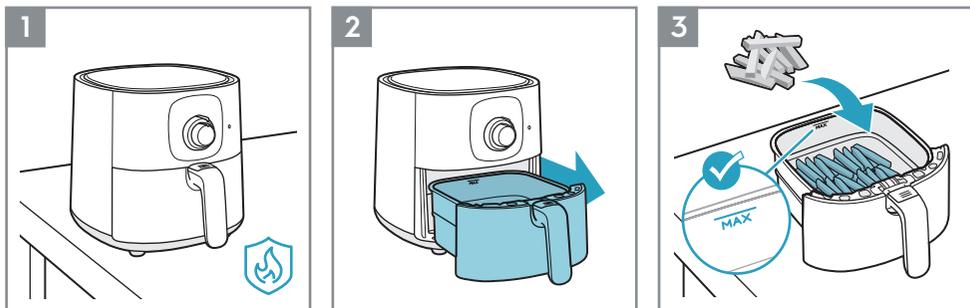

1. Place the appliance on a flat, stable and heat-resistance surface.
2. Pull out the pan and place it on a stable surface.
3. Put the food in the basket, observing the "MAX." capacity indication.

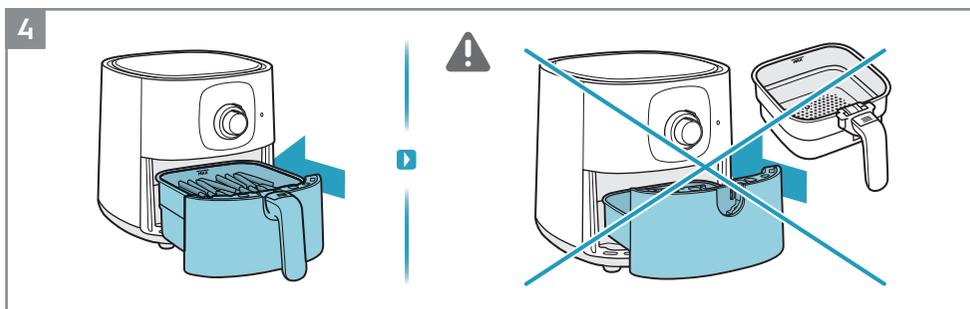


4. Push the pan with food completely back into the appliance.
- ▲ CAUTION: Do not use the appliance without the basket.

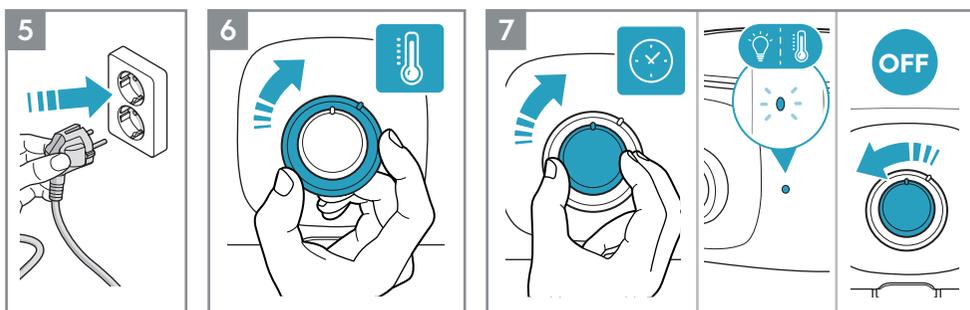

5. Plug in the appliance.
6. Rotate the temperature knob to the desired temperature (see Cooking Guide).
7. Rotate the timer knob to the desired time (see Cooking Guide).


NOTE: It is normal for the lamp to turn on and off. The lamp is only lit when the heater is working.

NOTE: Mechanical timer, it will work even if the appliance is off.

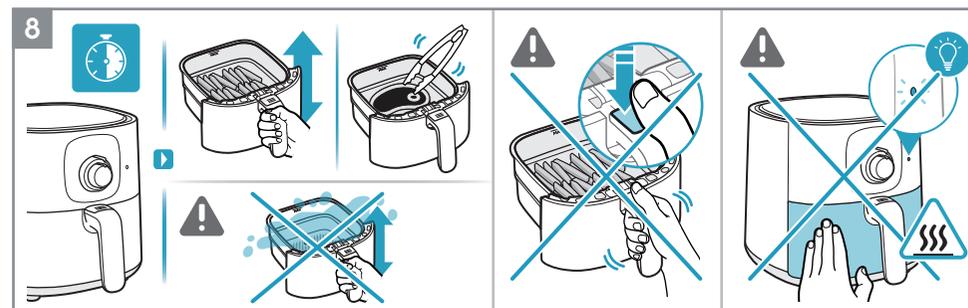


8. Depending on the type of ingredient, flip the food mid-cooking or every 7 minutes by using a heat-resistant tool or by just carefully shaking the food inside the basket. (see Cooking Guide).

- ▲ CAUTION: Be careful not to press the "Basket Release Button" when shaking the food.
- ▲ CAUTION: Be careful with hot surfaces when the appliance is in use.

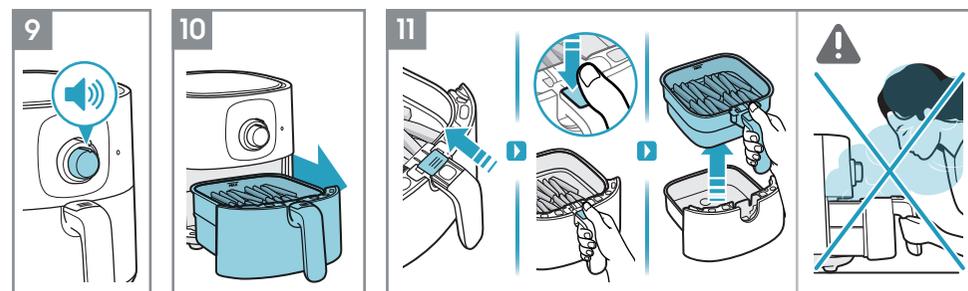

9. At the end of the cooking time, the appliance will issue a beep signal.
  10. Carefully remove the pan and place it on a heat-resistant surface.
  11. To remove the basket from the pan, follow these instructions:
    - Slide the transparent button cover
    - Press the "Basket Release Button"
    - Lift the basket from the pan
- ▲ CAUTION: Hot steam can come out of the basket when it is opened mid or at the end of cooking. Make sure your face, arms and hands are away from the steam when opening it.

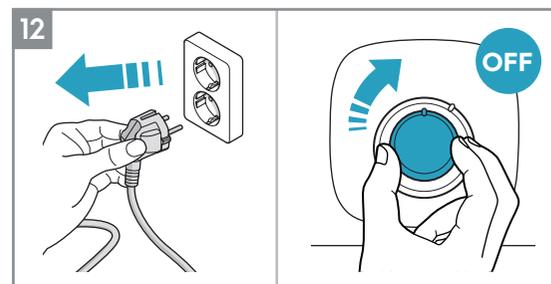


12. Unplug the appliance after using it.

NOTE: To manually turn the appliance off, rotate the knobs to the "0" position.


# Cooking Guide

	300-800g	15-30min	180°C			
	300-800g	20-30min	180°C			
	100-500g	10-20min	170°C			
	100-400g	10min	200°C			
	100-200g	10min	200°C			
	100-500g	10-30min	180°C			
	100-500g	13-20min	180°C			
 Max 1.2kg	800-1200g	45-60min	180°C			
	100-500g	10-15min	140°C			
	100-500g	10min	180°C			
	25-50g each	10min	170°C			


# Cleaning

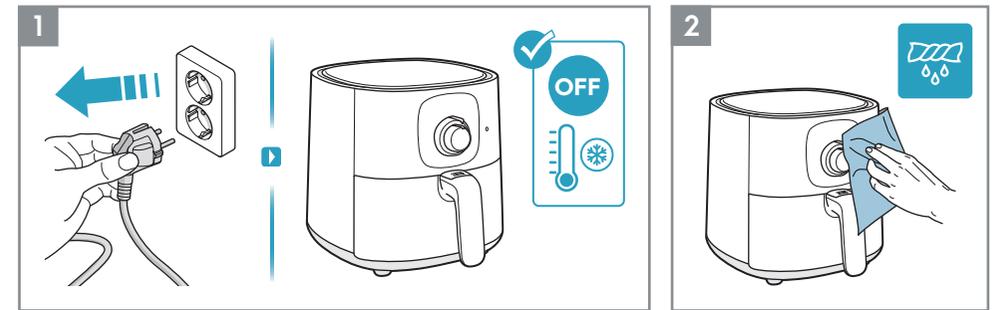

1. Always unplug the appliance and wait until it cools down before cleaning it.
2. Wipe the outside of the appliance with a soft cloth.

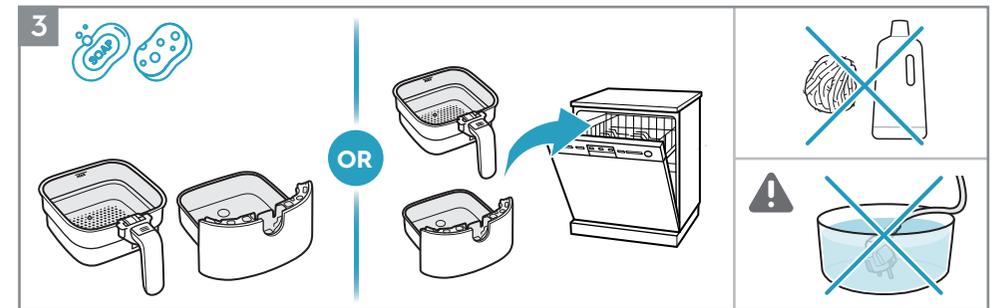

3. Clean the basket and pan with warm water and dish soap, or place them in the dishwasher.
- NOTE:** Avoid using abrasive cleaning products or metal tools in order to protect the non-stick coating.
- ⚠ CAUTION:** Never submerge the product, its cord or plug in water or any other liquid.

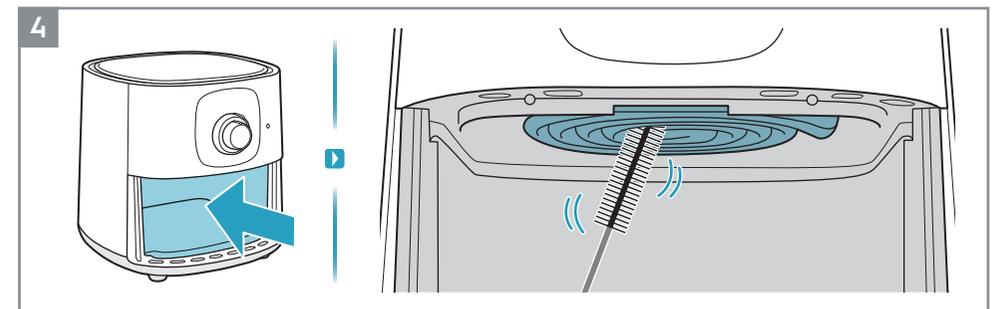

4. Clean the heating element with a cleaning brush.
- NOTE:** Ensure the appliance is completely cooled down before cleaning the heating element.

## What to do if...

Problem	Check if...
You cannot activate or operate the appliance.	<ul style="list-style-type: none"> <li>The appliance is correctly connected to an electrical supply.</li> <li>The basket and pan are in the correct position. Ensure they are completely pushed into the appliance to enable the electrical supply.</li> <li>The cooking time is set.</li> </ul>
You cannot slide the pan into the appliance.	<ul style="list-style-type: none"> <li>The basket is filled over its maximum capacity.</li> <li>The basket is placed correctly. It has to click when you place it in the pan.</li> <li>There's an object under the pan that is an obstacle to close it properly.</li> </ul>
White smoke comes out of the appliance.	<ul style="list-style-type: none"> <li>The food you prepare is too greasy.</li> <li>The pan and the basket are clean.</li> </ul>

## Disposal



This symbol on the product or on its packaging indicates that the product may not be treated as household waste. To recycle your product, please take it to an official collection point or to an Electrolux service center that can remove and recycle the battery and electric parts in a safe and professional way. Follow your country's rules for the separate collection of electrical products and rechargeable batteries.

Electrolux reserves the right to change products, information and specifications without notice.

## أنت محور تفكيرنا

شكرًا لاختيارك هذا الجهاز من إلكترولوكس. لقد اخترت منتجًا يجلب معه عقودًا من الخبرة المهنية والابتكار. فهو يجسد الإبداع والأناقة، وقد صممناه ونحن نفكر في كيفية خدمتك. يمكنك أن تكون مطمئنًا كلما استخدمته من حصولك على نتائج رائعة في كل مرة.

مرحبًا بك في إلكترولوكس.

يرجى زيارة موقعنا من أجل:

الحصول على نصائح تتعلق بالاستخدام والاطلاع على الكتيبات/النشرات وحل الأعطال ومعلومات عن الخدمات : [www.electrolux.com](http://www.electrolux.com) 

سجل منتجك للحصول على أفضل خدمة: [www.electrolux.com/productregistration](http://www.electrolux.com/productregistration) 

اشتر الملحقات والمواد الاستهلاكية لجهازك: [www.electrolux.com/shop](http://www.electrolux.com/shop) 

## رعاية وخدمة العملاء

عند الاتصال بمركز الخدمة، تأكد من توفر البيانات التالية. يمكن العثور على رقم الطراز ورقم المنتج والرقم التسلسلي على لوحة التصنيف.

المرجع:

Scan QR code to register www.electrolux.com

QR Code  
15 x 15 mm

 **Electrolux**

Model No.: E3AF1-100B  
Product Desc.: Air Fryer  
Product No.: 900 943 368  
Type: AF-N4010  
Volt, Freq.: 220-240V-50/60Hz  
Power: 1350W

Serial No.: **YWW00000**

Aktiebolaget Electrolux  
St. Goransgatan 143, SE 105 45 Stockholm, Sweden  
Made in China



الشرق الأوسط، شمال و وسط افريقيا(MENCA)

الخدمة لجميع الأسواق باستثناء الإمارات العربية المتحدة: [serviceMEA@electrolux.com](mailto:serviceMEA@electrolux.com)

تسجيل المنتج: <https://register.electroluxarabia.com>

الإمارات العربية المتحدة

الخدمة في دولة الإمارات العربية المتحدة: [customercarede@electrolux.com](mailto:customercarede@electrolux.com)

الرقم المجاني: 8003535

تسجيل المنتج: <https://register.electroluxarabia.com>

## نصائح للسلامة

يمكن استخدام الجهاز من قبل الأطفال الذين تتراوح أعمارهم بين 8 سنوات فأكثر والأشخاص الذين يعانون من نقص في القدرات الجسمية والحسية والعقلية أو نقص الخبرة والمعرفة إذا تم الإشراف عليهم أو تلقيهم تعليمات تتعلق بكيفية استخدام الجهاز بأمان وفهم المخاطر التي تنطوي عليها. يجب ألا يُسمح للأطفال بالعبث بالجهاز. ويجب ألا يقوم الأطفال بالتنظيف وصيانة المستخدم دون الخضوع لإشراف.

هذا الجهاز ليس مخصصًا للاستخدام من قبل أشخاص (بما في ذلك الأطفال) يعانون من قدرات بدنية أو حسية أو عقلية محدودة أو يفتقرون للخبرة والمعرفة، ما لم يكونوا قد تم منحهم الإشراف أو التعليمات فيما يتعلق باستخدام الجهاز بطريقة آمنة وفهم المخاطر التي ينطوي عليها من قبل شخص مسؤول عن سلامتهم. يجب مراقبة الأطفال للتأكد من أنهم لا يعبثون بالآلة.

يرجى الاحتفاظ بالمقلاة الهوائية وسلك الطاقة بعيدًا عن متناول الأطفال أقل من 8 سنوات. فهذا الجهاز مخصص للاستخدام المنزلي العادي فقط.

في حالة تلف سلك الطاقة أو قطعه، يجب استبداله بواسطة وكيل خدمة أو أشخاص مؤهلين بشكل مشابه لتجنب مخاطر السلامة.

قد تصح الأسطح التي يمكن الوصول إليها ساخنة أثناء الاستخدام.

لا تقم بتغطية مدخل الهواء وفتحات مخرج الهواء أثناء تشغيل الجهاز.

قم دائمًا بإعادة الجهاز إلى مركز خدمة معتمد لفحصه أو إصلاحه. لا تحاول إصلاح الجهاز بنفسك.

لا تضع الجهاز على أو بالقرب من موقد غاز ساخن، أو أي نوع من المواقد الكهربائية، أو لوحات الطهي الكهربائية أو في فرن ساخن.

تأكد دائمًا من إدخال القابس في المقبس بشكل صحيح.

احتفظ بسلك التيار الكهربائي بعيدًا عن الأسطح الساخنة أو الأشياء الحادة لتجنب التلف. لا تضع أبدًا أي شيء قابل للاشتعال، أو انفجاري أو أكال في السلة.

لا تضغط بشكل مفرط، أو تثني، أو تلوي أو تضع أجسام ثقيلة على سلك الطاقة لمنع كشف السلك الداخلي أو قطعه. لا تستخدم الجهاز في حالة تلف القابس، أو السلك الرئيسي أو الجهاز نفسه. لا تبدأ أبدًا في الطهي دون وضع السلة في مكانها.

لا تملأ السلة فوق خط "MAX" لمنع ملامسة الطعام لعنصر التسخين. ولا تلمس السلة بيدك مباشرة أثناء الاستخدام أو بعده مباشرة لتجنب التعرض للحروق.

لا تستخدم أي أواني بلاستيكية أو مواد تغليف ورقية عادية لتغليف الطعام للطهي.


لا تقم بإدخال دبائيس، أو أسلاك أو أجسام أخرى في أي من فتحات المقلاة الهوائية لتجنب التعرض لصدمة كهربائية أو إصابة.

يرجى التأكد من فصل المقلاة الهوائية قبل تنظيفها أو إصلاحها. ولا تحرك أو تهز المقلاة الهوائية أثناء الاستخدام.


لا تدخل أي أجسام غريبة في مفتاح الأمان لتجنب أي خطر.

تنبيه: أسطح ساخنة.


يمنع تزويد هذا الجهاز من خلال جهاز تحويل خارجي، مثل المؤقت، أو توصيله بدائرة يتم تشغيلها وإيقاف تشغيلها بانتظام بواسطة الأداة المساعدة.

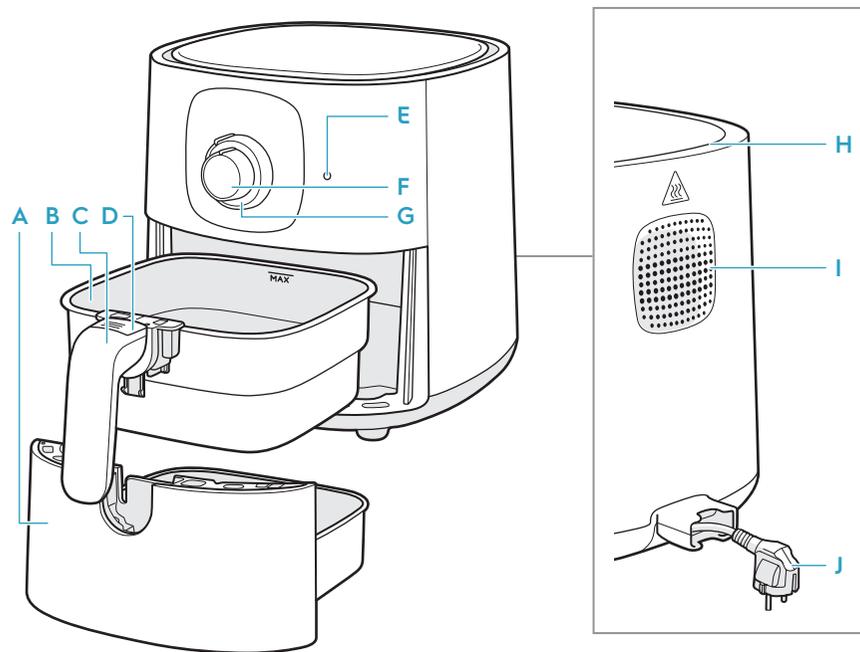

A	الوعاء	D	زر تحرير السلة	F	التحكم في الوقت ( 0-60 دقيقة )	H	مدخل الهواء.
B	السلة	E	ضوء	G	مقبض التحكم في درجة الحرارة	I	مخرج الهواء
C	مقبض السلة	J	السلك الرئيسي		( 80-200 درجة مئوية )		

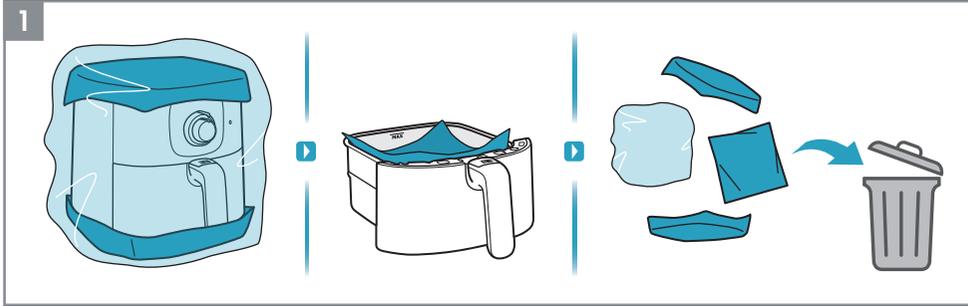


1. زل جميع مواد التغليف والمواد الواقية.

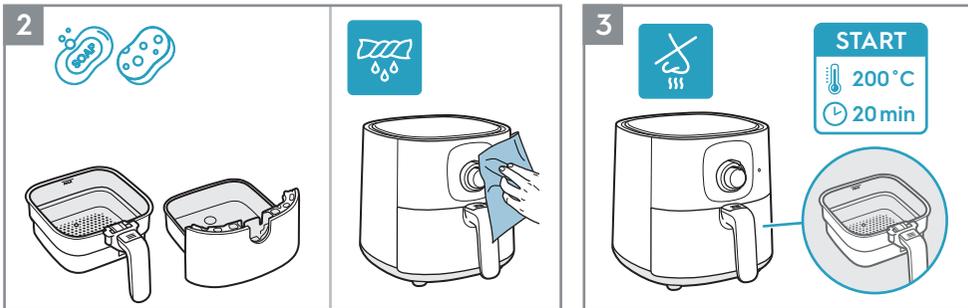

2. نظّف السلة والوعاء بالماء الدافئ وصابون أطباق. امسح الجانب الداخلي والخارجي للجهاز بقطعة قماش ناعمة.

3. من الطبيعي بالنسبة للوحدة الجديدة أن تنبعث منها روائح في المرات القليلة الأولى من تشغيلها.


قم بتشغيل المقلاة الهوائية الفارغة على حرارة 200 درجة مئوية لمدة 20 دقيقة قبل الاستخدام الأول لتجنب ذلك.

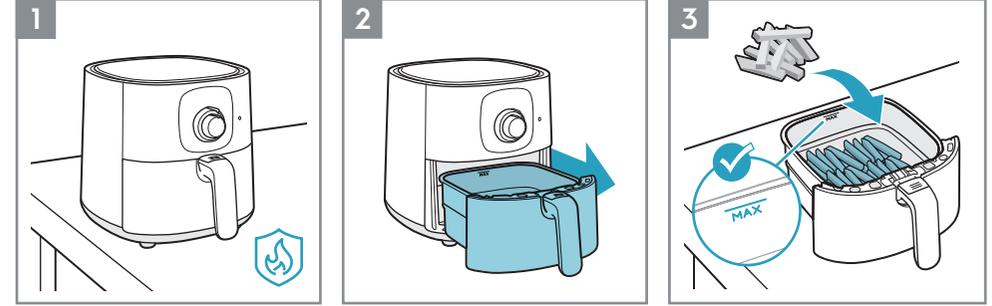

1. ضع الجهاز على سطح مستوي وثابت ومقاوم للحرارة.


2. اسحب المقلاة للخارج وضعها على سطح ثابت.

3. ضع الطعام في السلة، مع مراعاة علامة إشارة السعة "MAX".

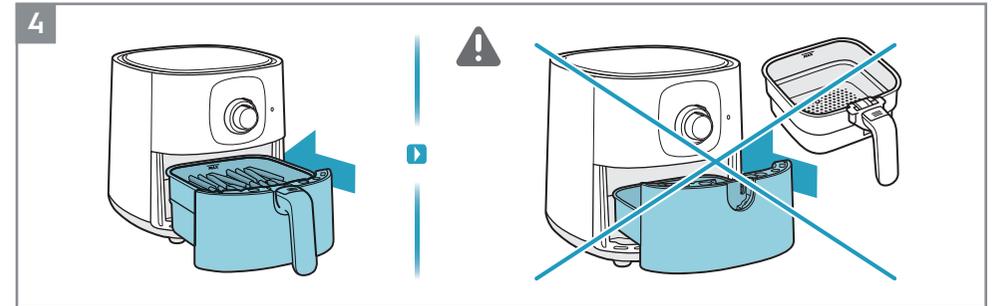

4. ادفع المقلاة التي تحتوي على الطعام إلى داخل الجهاز بالكامل.

⚠ تنبيه: لا تستخدم الجهاز دون السلة.

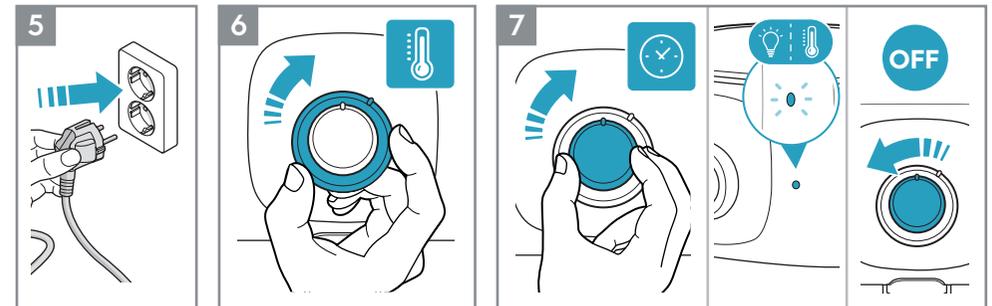


5. قم بتوصيل الجهاز.

6. قم بتدوير مقبض درجة الحرارة إلى درجة الحرارة المطلوبة (انظر دليل الطهي).

7. قم بتدوير مقبض المؤقت إلى الوقت المطلوب (انظر دليل الطهي).

ملاحظة: من الطبيعي أن يتم تشغيل المصباح وإيقاف تشغيله. يضيء المصباح فقط عندما يعمل سخان.


ملاحظة: مؤقت ميكانيكي، سيعمل حتى إذا كان الجهاز مغلقا.

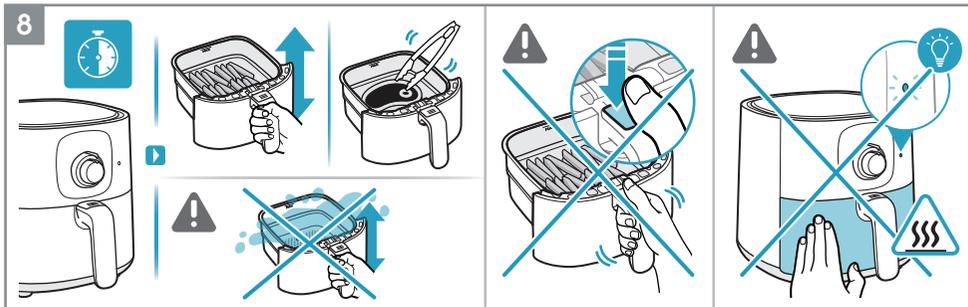

8. اعتماداً على نوع المكوّن، اقلب الطعام في منتصف عملية الطهي أو كل 7 دقائق باستخدام أداة مقاومة للحرارة أو عن طريق هز الطعام بعناية داخل السلة، (انظر دليل الطهي).

⚠ تنبيه: احرص على عدم الضغط على "زر تحرير السلة" عند هز الطعام.

⚠ تنبيه: توخ الحذر مع الأسطح الساخنة عندما يكون الجهاز قيد الاستخدام.

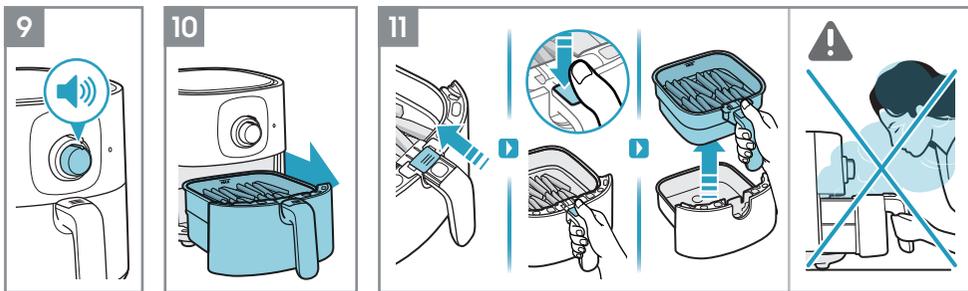

9. في نهاية وقت الطهي، سيصدر الجهاز إشارة صوتية.

10. ارفع القدر بحذر وضعه على سطح مقاوم للحرارة.


11. لإزالة السلة من المقلاة، اتبع التعليمات التالية:

- اضغط على غطاء الزر الشفاف

- اضغط على "زر تحرير السلة"

- ارفع السلة من المقلاة


⚠ تنبيه: يمكن أن يخرج البخار الساخن من السلة عند فتحها في منتصف الطهي أو في نهايته. احرص على إبعاد وجهك، وذراعيك ويديك عن البخار عند فتحها.

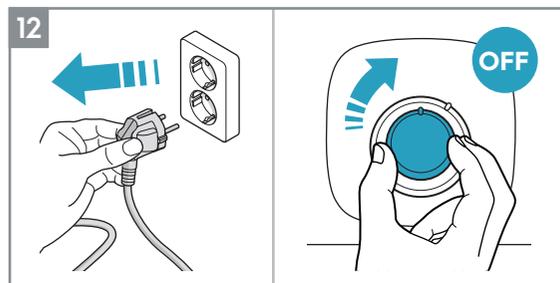


12. افصل الجهاز بعد استخدامه.

ملاحظة: لإيقاف تشغيل الجهاز يدوياً، قم بتدوير المقابض إلى الوضع "0".


الزيت	الزيت	الزيت	الزيت	الزيت	الزيت	الزيت
		✓	180°C	30-15 دقيقة	800-300 جرام	7mm/10mm
✓		✓	180°C	30-20 دقيقة	800-300 جرام	7mm
✓		✓	170°C	20-10 دقيقة	500-100 جرام	
	✓		200°C	10 دقائق	400-100 جرام	
	✓		200°C	10 دقائق	200-100 جرام	
	✓		180°C	30-10 دقيقة	500-100 جرام	
	✓		180°C	20-13 دقيقة	500-100 جرام	
	✓		180°C	60-45 دقيقة	1200-800 جرام	1.2 كجم كحد أقصى
	✓		140°C	15-10 دقيقة	500-100 جرام	
	✓		180°C	10 دقائق	500-100 جرام	
			170°C	10 دقائق	50-25 جرام لكل منهما	

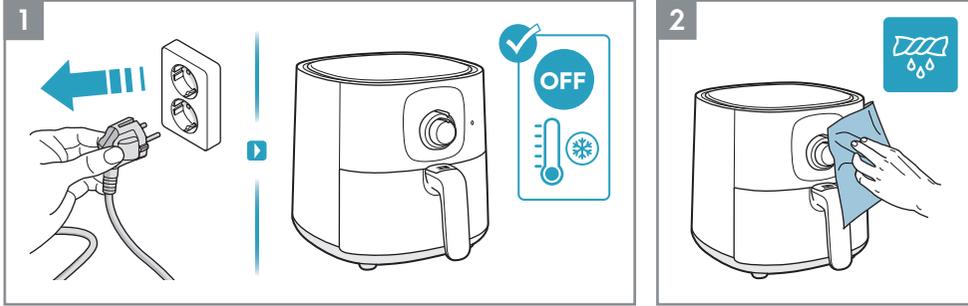

1. افصل الجهاز دائماً وانتظر حتى يبرد قبل تنظيفه.
2. امسح الجانب الخارجي من الجهاز بقطعة قماش ناعمة.

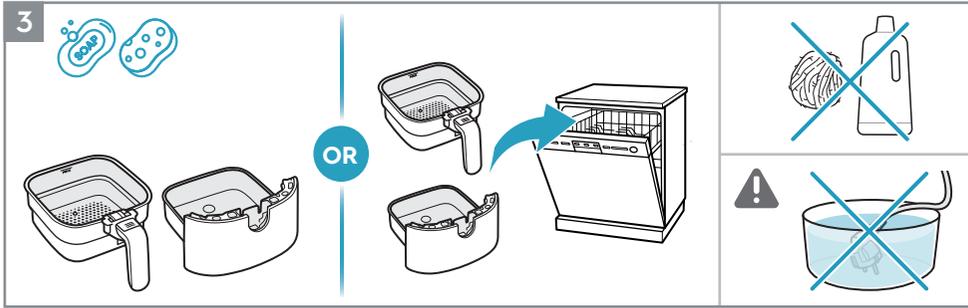

3. نظّف السلة والوعاء بالماء الدافئ وصابون الأطباق، أو ضعهما في غسالة الأطباق.
- ملاحظة: تجنب استخدام منتجات التنظيف الكاشطة أو الأدوات المعدنية لحماية الطلاء غير اللاصق.  
⚠ تنبيه: لا تغمر المنتج، أو سلكه أو القابس في الماء أو أي سائل آخر أبداً.

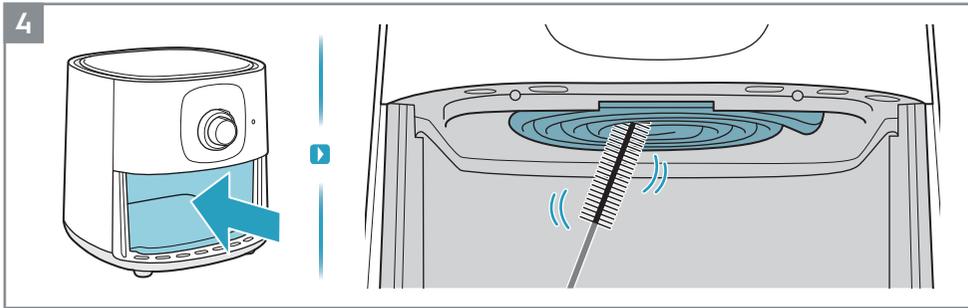

4. نظّف عنصر التسخين بفرشاة تنظيف.
- ملاحظة: تأكد من تبريد الجهاز تماماً قبل تنظيف عنصر التسخين.

المشكلة	ول على نصائح
لا يمكنك تشغيل الجهاز أو تشغيله.	<ul style="list-style-type: none"> <li>• الجهاز متصل بشكل صحيح بمصدر إمداد تيار كهربائي.</li> <li>• السلة والوعاء في الوضع الصحيح. تأكد من دفعهما بالكامل في الجهاز للتمكين من إمداد التيار الكهربائي.</li> <li>• تم تعيين وقت الطهي.</li> </ul>
لا يمكنك إدخال الوعاء في الجهاز.	<ul style="list-style-type: none"> <li>• السلة ممتلئة فوق سعتها القصوى.</li> <li>• السلة موضوعة بشكل صحيح. يجب أن تصدر صوت نقر عند وضعها في الوعاء.</li> <li>• يوجد شيء تحت الوعاء يمثل عقبة لإغلاقه بشكل صحيح.</li> </ul>
يخرج دخان أبيض من الجهاز.	<ul style="list-style-type: none"> <li>• الطعام الذي تحضره دهني للغاية.</li> <li>• الوعاء والسلة نظيفان.</li> </ul>

يشير هذا الرمز الموجود على المنتج أو على عبوته إلى أنه لا يجوز التعامل مع المنتج كنفائات منزلية. وإعادة تدوير منتجك، يرجى أخذه إلى نقطة تجميع رسمية أو إلى مركز خدمة إلكترولوكس الذي يمكنه إزالة البطارية والأجزاء الكهربائية وإعادة تدويره بطريقة آمنة ومهنية. اتبع قواعد بلدك الخاصة بالتجميع المنفصل للمنتجات الكهربائية والبطاريات القابلة لإعادة الشحن.



تحتفظ إلكترولوكس بالحق في تغيير المنتجات، والمعلومات والمواصفات دون إشعار.

